Steering Wheel Controller | Dodge | 154


→ Vehicle Installation Instructions

The instructions below will guide you through installation of the Steering Wheel Controller in your vehicle.

Connections


Aftermarket Radio Harness

- 1. Connect Pin 6 of the Steering Wheel Controller harness to the Black ground wire of the aftermarket radio.
- 2. Connect Pin 12 of the Steering Wheel Controller to the Red accessory wire of the aftermarket radio.

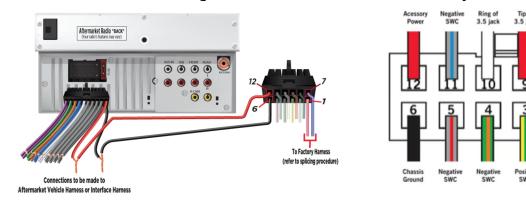

Vehicle Connection(s) to Factory Harness

- 1. Connect **Pin 1** of the Steering Wheel Controller (**Pink** wire) to the wire in Pin 5 of the vehicle's radio harness.
- 2. Connect Pin 7 of the Steering Wheel Controller (Blue/Pink wire) to the wire in Pin 6 of the vehicle's radio harness.

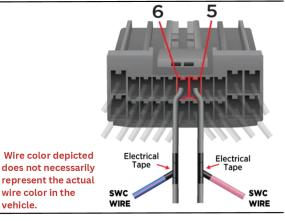

SWC 3.5 Jack Connections

For radios with a 3.5mm port located on the rear, plug the male 3.5mm jack directly into the back of the radio.

1. Connect the 3.5mm Jack to the SWC (Steering Wheel Control) input on the back of the radio.



vehicle.

Kenwood/JVC Radios with Single SWC wire

- 1. Connect the Blue/Yellow wire labeled Steering Wheel Remote Input to the Brown wire of the female 3.5mm jack.
- 2. Plug in the male 3.5mm jack into the female 3.5mm jack.



Programming the Steering Wheel Controller

In order to effectively program the Steering Wheel Controller, the aftermarket radio needs to be (or remain) completely wired. The Steering Wheel Controller harness should be wired and the (Steering Wheel Control) SWC 3.5mm Jack or SWC wiring should be connected.



Follow the steps below to programming the Steering Wheel Controller to your vehicle:

 Open the driver's door. Keep it open during the programming process.



2. Turn the vehicle's ignition On.



3. Plug in the **Steering Wheel Controller**.



4. The LED on the SWC begins rapid flashing **Green** and **Red**.



- **5.** (**Optional**) If the LED does not turn on, refer to **Connections** above and ensure all steps were performed precisely.
- **6.** Tap the **Volume Up** button on the steering wheel at a steady heartbeat pace (1, rest, 2, rest, 3, rest, etc.) until the rapid flash stops (3-5 seconds).



- 7. (Optional) If the Green and Red flashes are missed, reset the Steering Wheel Controller and restart the programming process from the beginning.
- 8. Stop tapping the Volume Up button. The Steering Wheel Controller is being programmed into the vehicle's steering wheel controls (SWC).



A series of 7 Green LED flashes identifies your vehicle type Once the detection process completes, the Green LED will pause for one to two seconds.

9. The LED begins flashing **Red** while the interface programs itself to the aftermarket radio. A series of **up to** 24 **Red** LED flashes identifies the detected Radio Type.



10. Upon successfully programming, the LED turns solid **Red**.



11. Test all functions of the Steering Wheel Controller installation for proper operation.