

AXSWC-2 | Changing Radio Type

If the **AXSWC-2** interface detected the vehicle properly, yet the sequence of light flashes do not match the radio installed, then the radio must be manually assigned to the interface.

This feature can be performed by either following the steps below, through a Windows based computer using the [Axxess Updater](#), or through the [Axxess Updater](#) app available from the Android/Apple mobile devices app store.

NOTE

If you encounter issues press and hold the **Volume Up** button **before** resetting the interface.

WARNING

If more than ten (10) seconds elapse between steps, the procedure will abort, and the LED on the interface will go out. The interface may not function properly and may need to be reset and reprogrammed.

Changing Radio Type Procedure

Ensure that the interface is programmed correctly according to the vehicle-specific document. Depending on the vehicle, there are generally three ways to program the interface:

1. Program the interface to the vehicle following the vehicle-specific document.
2. Turn the radio **Off**.
3. Cycle the key **Off**, then back **On**. (**continued on page 2**)



Changing Radio Type Procedure (cont.)

4. Wait until the LED flashes **Green** once then goes out.



5. Press and hold the **Volume Down** button on the steering wheel until the LED turns solid **Red**, then release. The LED will go out indicating the interface is in **Changing Radio Type** mode.
6. Reference the Radio/**Red** LED Table above for the preferred radio number.
7. (**Example**) Press and hold **Volume Up** on the steering wheel until the LED turns solid Red, then release.

Radio 1 has been programmed

NOTE

Repeat this step for your radio number.

8. Once the desired radio has been selected, press and hold **Volume Down** on the steering wheel until the LED turns solid **Red**. The LED will remain solid Red for three (3) seconds while the interface stores the new radio.



9. After the LED goes out, turn the radio on and test the steering wheel controls.

Radio/Red LED Table

LED	Radio	Communication
1st	Pioneer/Jensen	-
2nd	JVC	-
3rd	KENWOOD	-
4th	SONY/DUAL	-
5th	Adaptive SWC Radio	Internal Ladder
6th	Adaptive SWC Radio	Internal Ladder 10k
7th	Adaptive SWC Radio	Internal Ladder 1k
8th	Reserved for future use	-
9th	ALPINE	-
10th	ALPINE (type 2)	Type 2
11th	AXXERA	-
12th	AXXERA (type 2)	Type 2
13th	MAGNADYNE	-

LED	Radio	Communication
14th	BOSS	-
15th	CLARION	Type 1
16th	CLARION	Type 2
17th	JVC/Kenwood	Type 2
18th	Reserved for future use	-
19th	Reserved for future use	-
20th	Reserved for future use	-
21st	Resistive Radio #1	-
22nd	Resistive Radio #2	-
23rd	Resistive Radio #3	-
24th	Resistive Radio #4	-
25th	Resistive Radio #5	-
26th	Resistive Radio #6	-

WARNING

If the AXSWC-2 flashes RED two (2) times and you do not have an Alpine radio connected, the AXSWC-2 did not detect a radio. Verify the 3.5mm connector is connected to the SWC input on the radio.