
UMBRA@MOTORISATION

Somfy Rollup 28 Battery RTS Motor

Radio Control

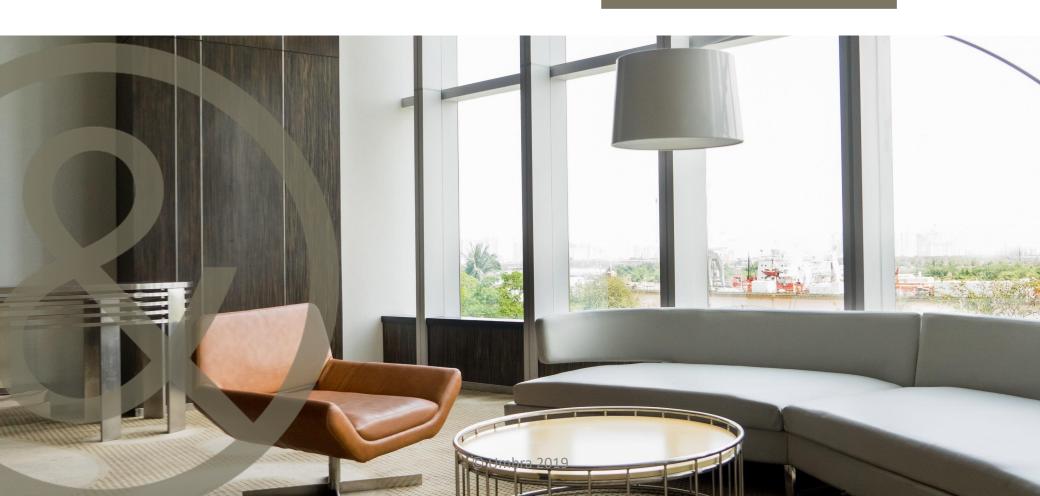






RTS controls explained







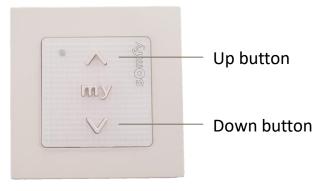

Smoove Wall Switch

Before You Start – Important Information





• Only the blind you want program can be connected to a battery pack, all other blinds must be disconnected whilst programming unless they have already been programmed. Any blinds that have been fully programmed can be left connected to their battery packs.



The Somfy Rollup 28 RTS motor uses an external battery pack that must be connected before the motor will
operate




• The external battery pack can often be concealed behind the blind. Ensure that that charging port is accessible rather than being tight against the wall



Before You Start




Only one motor should be connected to its battery pack at a time during the programming process. Once a motor has been fully setup it can be left connected to its battery.

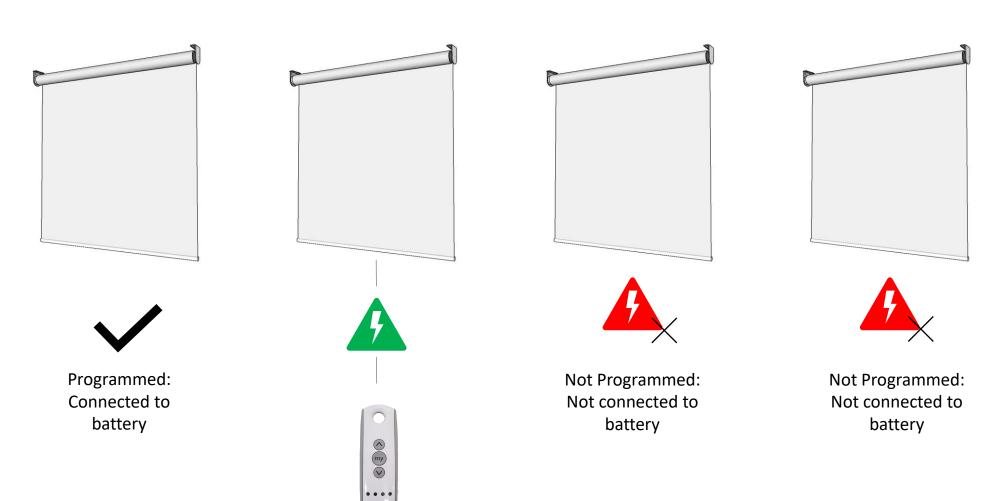

Pairing The Remote

UMBRA®

Pairing the remote and setting turning direction

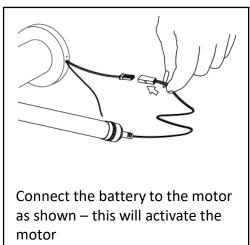





You now have 60 seconds to complete the steps on this page and pair the remote control



If you have a multi channel remote, select the channel you wish to pair the blind to

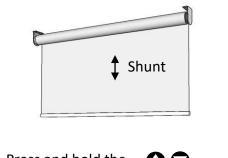


Press and hold the buttons together on the remote control until the blind shunts

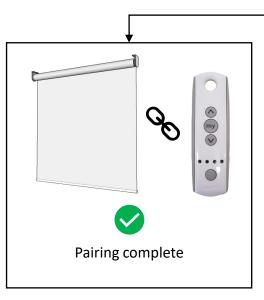

Changing Turning Direction




Check and change the turning direction of the motor

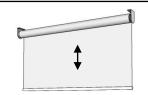


Press and hold the button and observe the direction the blind travels.


It could travel in either direction depending on which side the motor is on

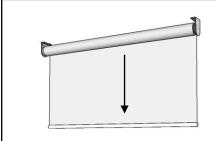


If the blind travels DOWN when you press the button you can skip the rest of this page and move straight on to setting the limits

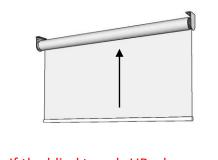

If the blind travels UP when you press the button you need to change the turning direction

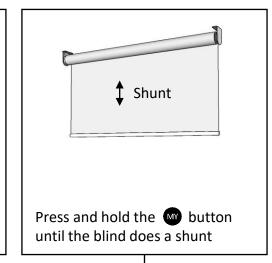

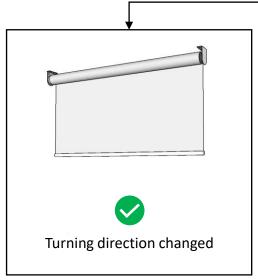




You can now check the turning direction is correct by pressing and holding EITHER the or button


The motor is still in programming mode so you have to press and hold to drive the blind


Setting Limits


UMBRA®


Set a top and bottom limit position

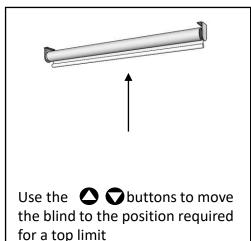


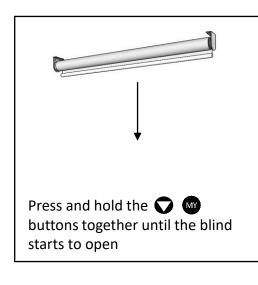


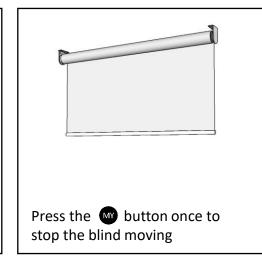


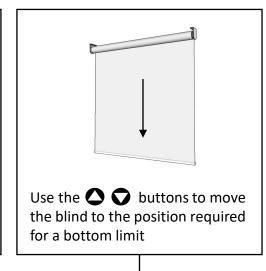

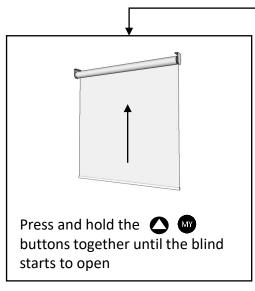

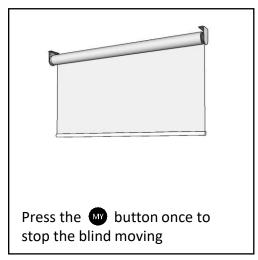

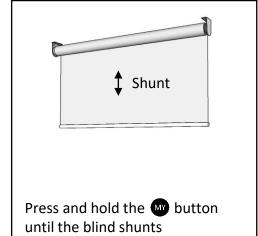

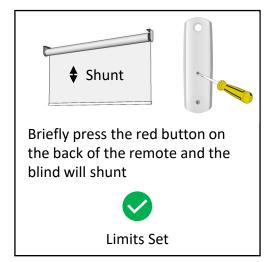



Intermediate Stop Position


UMBRA®

bottom limit position

It is optional to set an intermediate stop position

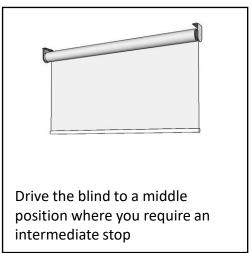


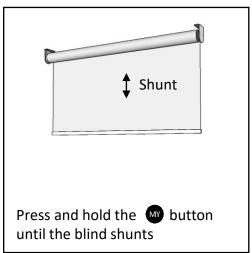


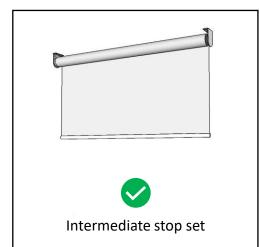




Deleting the intermediate stop position

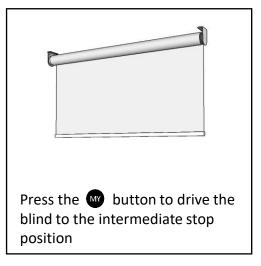

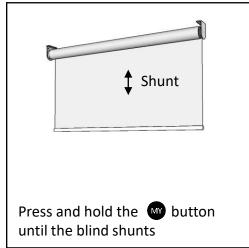


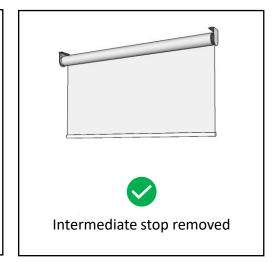



Adjusting Limits


UMBRA®


How to adjust any limit

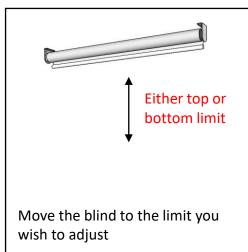

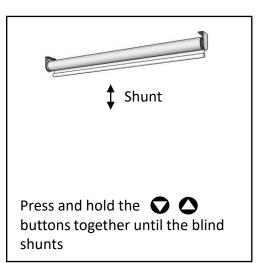

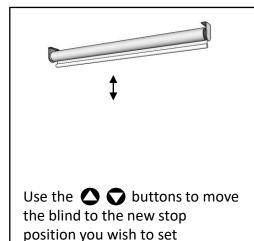

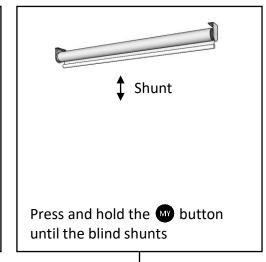


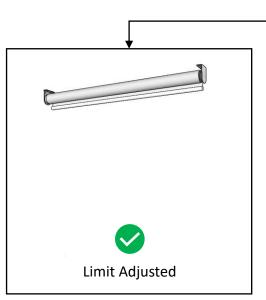


Adding Remotes

UMBRA®

Copying a channel on one remote to a new remote

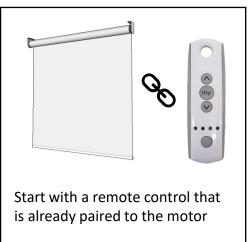




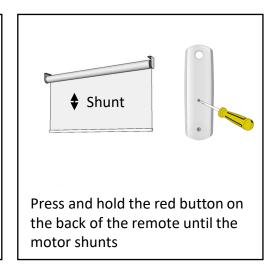






pair the blind to

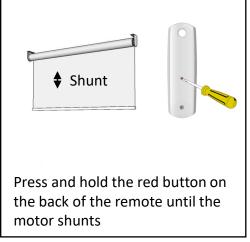



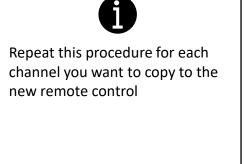

Motor Reset

UMBRA®

Reset motor back to factory settings

