
# UMBRA@MOTORISATION

Somfy RTS Motor

Radio Control

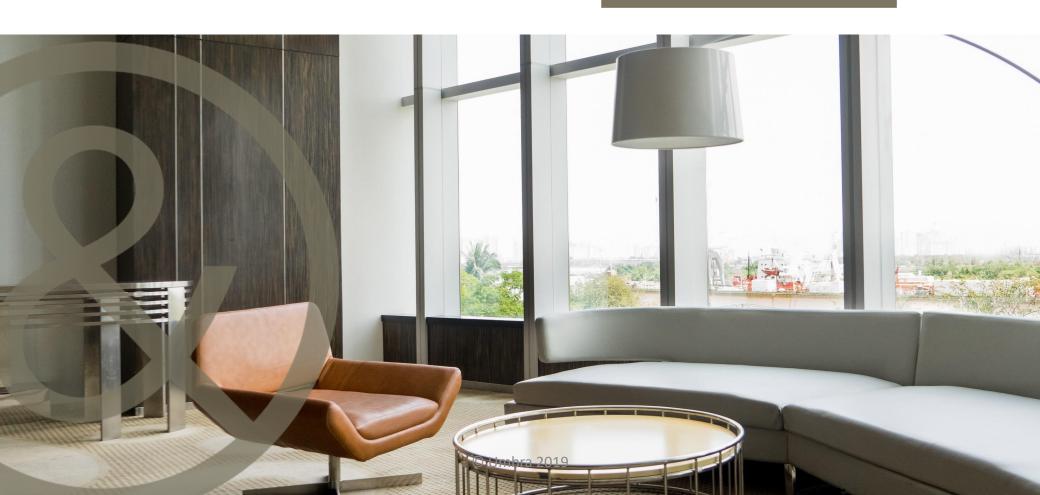





# RTS controls explained










Smoove Wall Switch

# Somfy RTS 230v motor wiring




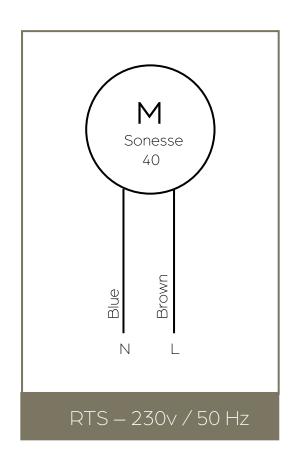

• The Sonesse 40 motor range is Class II rated - no earth required

# Somfy RTS 24v motor wiring



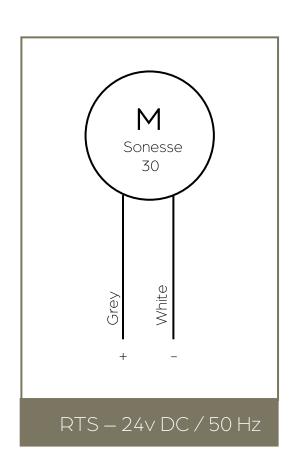

### Before You Start – Important Information





Only the blind you want program can be connected to the power whilst programming. Disconnect all other blinds from the power to avoid interference.




Do not reduce the motor cable to less than 30cm as this may cause communication problems between the remote control and the motor as the motor uses the copper core of the cable as a radio antenna.

### Before You Start




Only one motor should be powered on at a time when setting limits or making any programming changes

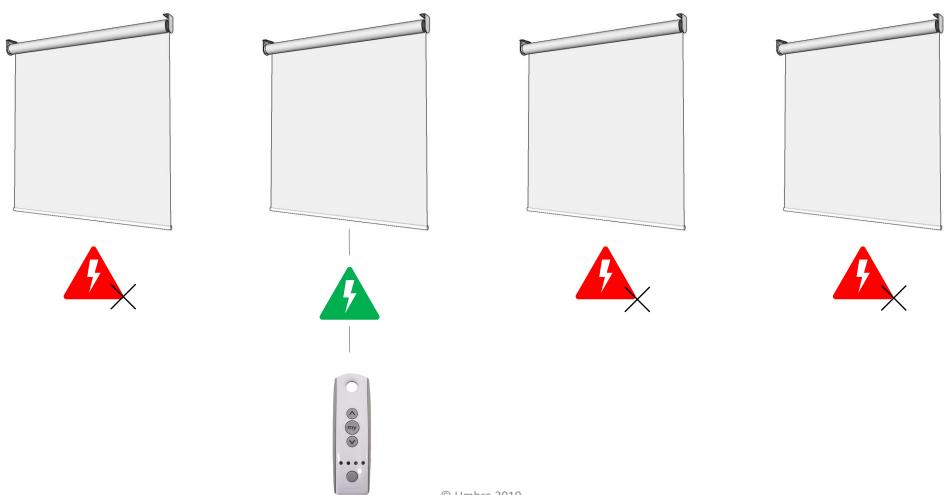

# Pairing The Remote





Pairing the remote and setting turning direction

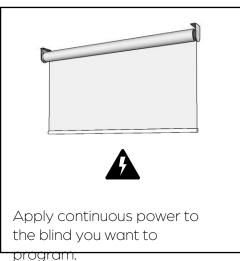





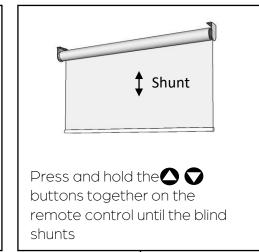


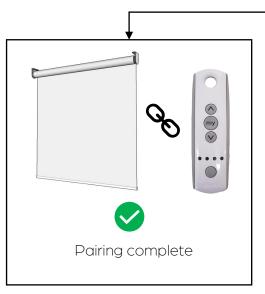

# **Changing Turning Direction**




 Check and change the turning direction of the motor





Press and hold the button and observe the direction the blind travels.


It could travel in either direction depending on which side the motor is on

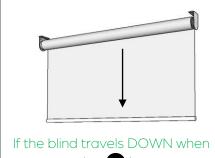

If the blind travels DOWN when you press the button you can skip the rest of this page and move straight on to setting the limits

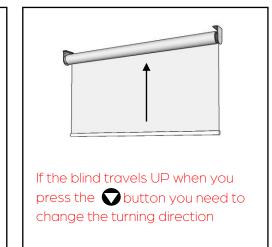

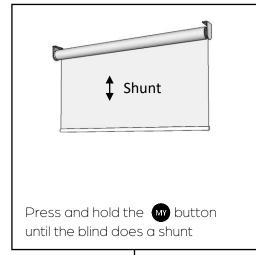

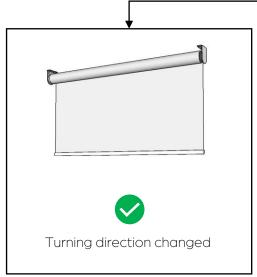




You can now check the turning direction is correct by pressing and holding EITHER the or button


The motor is still in programming mode so you have to press and hold to drive the blind


### **Setting Limits**


# UMBRA®


#### Set a top and bottom limit position

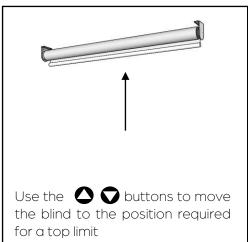


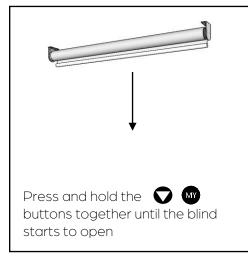


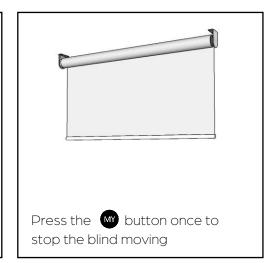


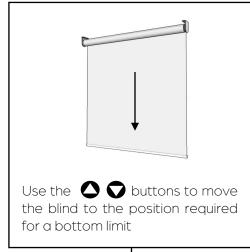

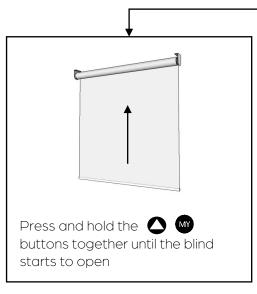

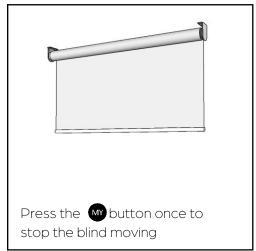

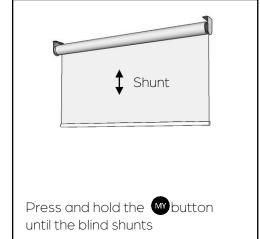


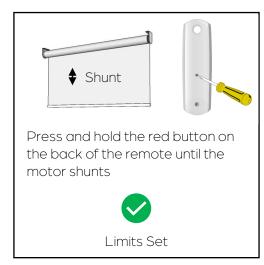



### Intermediate Stop Position




#### It is optional to set an intermediate stop position

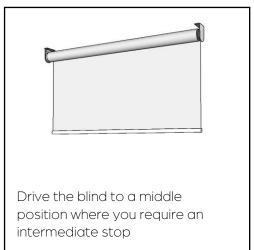


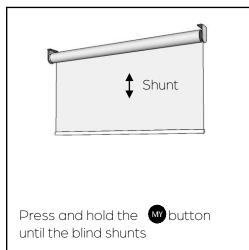


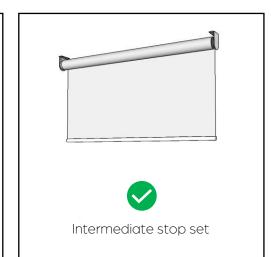

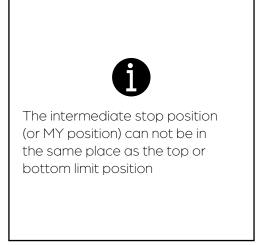

#### Deleting the intermediate stop position

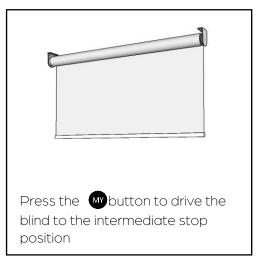

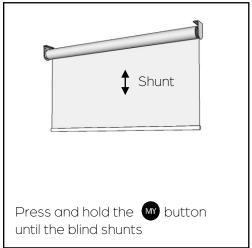






# **Adjusting Limits**





How to adjust any limit

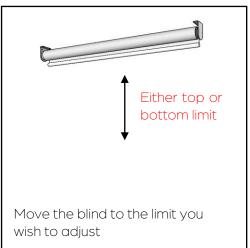

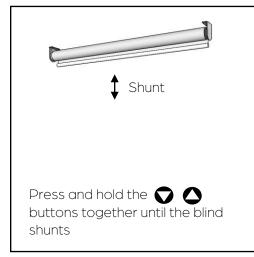

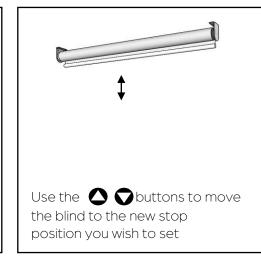

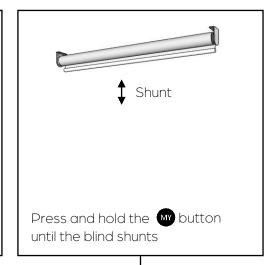

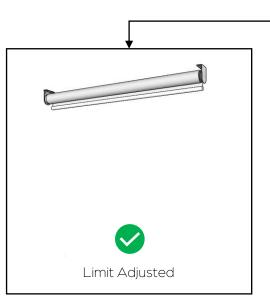


### **Adding Remotes**

# UMBRA®

#### Copying a channel on one remote to a new remote






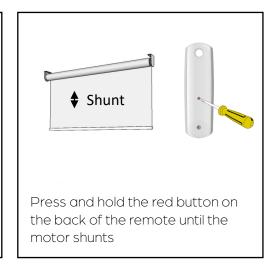






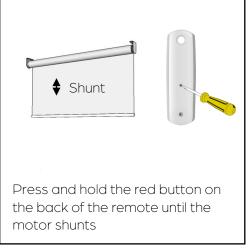



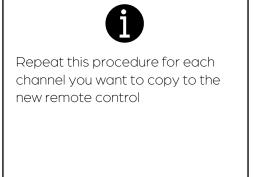

#### **Motor Reset**

# UMBRA®

#### Reset motor back to factory settings



Begin with the power applied to the blind for at least 60 seconds

