


Glydea RTS, Irismo 45 RTS, Irismo 35 RTS


Recommendations

Please note there is a maximum distance between brackets and a minimum mounting distance from the wall, see drawing below.

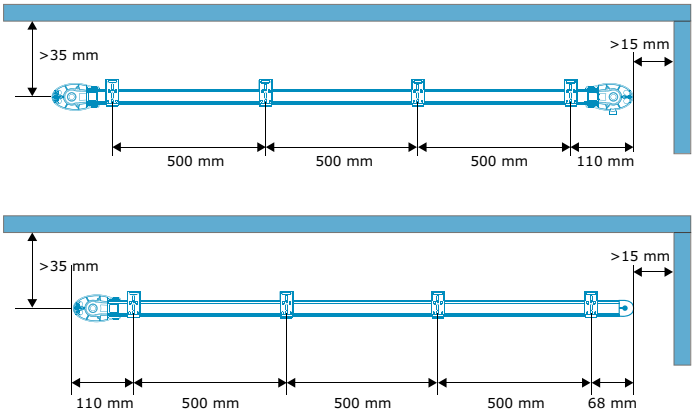

For Glydea RTS only

Motor cable output options

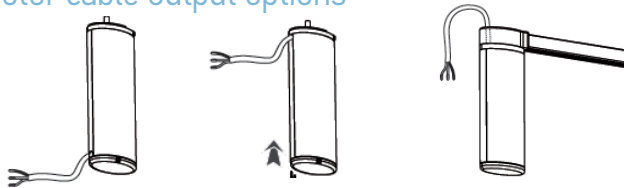


Attach motor to rail



Wiring guide DCT & RTS

Power connection

Wire	
1. Neutral	Blue
2. Live	Brown
3. Earth	Yellow/green

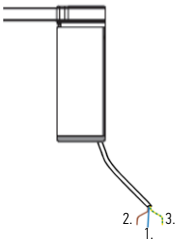

Programming instruction

1 Connect the RTS transmitter to the motor

Only connect one motor to power whilst programming



Press simultaneously
until...



...motor jogs



Short press,
UP or DOWN.

At the first command, open or close, the curtain will make a complete run, open & close, to record the hard end limits.

2 Check the motor rotation direction



OK → 4



NOT OK → 3

3 Change if needed motor rotation direction



2 sec.

Press until...



...motor jogs

4 Record a RTS transmitter



Press the prog button
on the back of the
control until...



...motor jogs

Setting My position



Place the curtain in the desired position



To confirm My position,
press MY until...



...motor jogs

Re-adjustment of end -limits

 
1 Place the curtain in the end limit you wish to adjust



OR



2 Put the receiver in programming mode



Press simultaneously
until...



...motor jogs

3 Place the curtain in the new desired end limit



OR



To confirm new end limit,
press MY until...

 


...motor jogs

4 Repeat the process for the other end limit

Set Touch motion or manual over ride mode

1 Put the receiver in programming mode




5 sec.



Press simultaneously
until... ..motor jogs

 
2 Switch between manual over-ride to touch motion



5 sec.



Press simultaneously
until... ..motor jogs

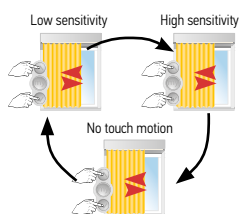

Press again to move to
next function.



2 sec.



To confirm new setting,
press MY until... ..motor jogs

Set track speed, default speed = 20 cm/s

Possible speeds: 12.5 / 15 / 17 / 20 cm/s

1 Enter programming mode



Press simultaneous
until... ..motor jogs



2 Enter new speed



Press to decrease
speed

OR



Press to increase
speed



2 sec.

To confirm new speed,
press until...



...motor jogs

Add transmitter

see RTS page 27 (RTS motor)

Reset motor to factory mode, erase all settings



For Glydea RTS,
remove motor
bottom cover




Press and hold
programming
button...




...until motor has jogged three times

Wiring control unit to Glydea DCT

Connection of DCT tool

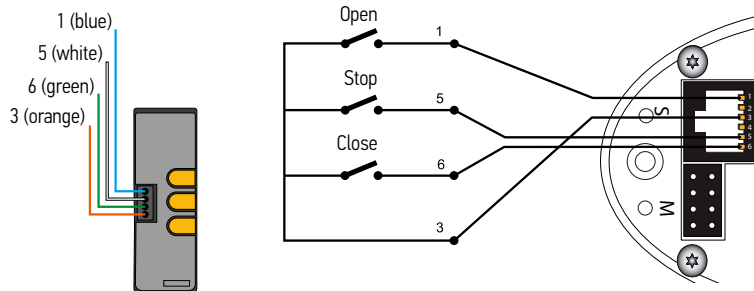


Connection of Centralis IB

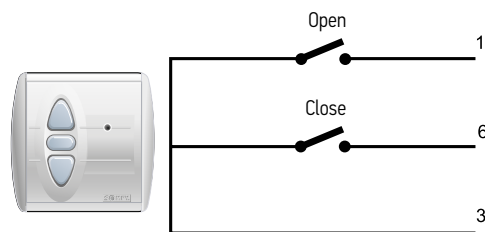

Programming instruction for Glydea DCT

it's recommended to use Setting tool ref 9014599

 Programming




Start up, press up
(open) or
down (close)



At the first command, open or close,
the curtain will make a complete run, open - close,
to record the hard end limits.

Modify motor rotation direction, if needed

Place the curtain
away from the
end limits

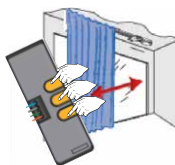

Press and hold 'UP',
'STOP' and 'DOWN'
until...



...motor jogs

 


Press and hold
'STOP' until...



...motor jogs

Re-adjustment of end -limits




Place the curtain in the end limit you wish to adjust




OR



 To enter programming
mode, press 'UP', 'STOP'
and 'DOWN' until...



...motor jogs

 


Place the curtain in the new desired end limit



OR



 To confirm new end limit,
press 'STOP' until...



...motor jogs

Set Touch motion or manual over ride mode

Put the receiver in programming mode



Press 'UP', 'STOP' and 'DOWN' until...




...motor jogs




Press until...



...motor jogs

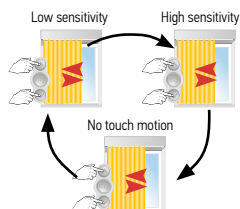

Press again to move to next function.

 

To confirm setting, press 'STOP' until...

 


...motor jogs

For setting of

- Track speed, Follow procedure described for RTS control, page 35
- My position Follow procedure described for RTS control, page 34

Reset motor to factory mode, erase all settings



Press 'UP', 'STOP' and 'DOWN' until...



...motor has jogged three times

For setting of

- Motor rotation
- Track speed
- Back release


Use setting tool ref 9014599

Programming instruction

Please note, one of the two power wires needs to be connected to permanent power during programming

Modify motor rotation direction, if needed


Place the curtain
away from the
end limits

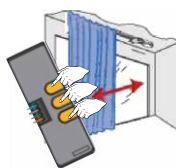

Press 'UP', 'STOP'
and 'DOWN' until...



 ...motor jogs



Press 'STOP'
until...



...motor jogs

Back release setting

1

Move the curtain
to the
OPEN end limit



Press and hold
'STOP' and 'DOWN'
until...



...motor jogs

 


Press 'DOWN' to...



...desired
release point

2



To confirm back-
release point, press
'STOP' until...

 


...motor jogs

For setting of

- Track speed, Follow procedure described for RTS control, page 35

Reset motor to factory mode, erase all settings




Press and hold 'UP',
'STOP' and 'DOWN'
until...



...motor has jogged three times

Wiring instruction for Glydea WT

Motor can be used without programming.

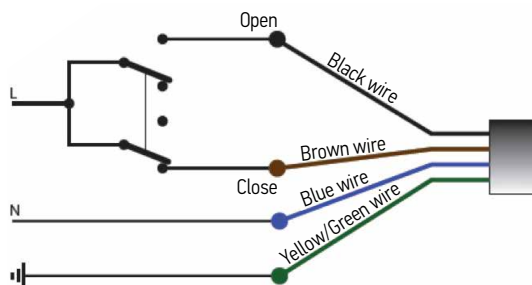

When first connected
to power the motor will
run a full cycle to set the
end limits