



# VENTURE SPORT WIRELESS EARBUDS

## Quick Start Guide

Model: VENTURE SPORT

For more info, please contact  
ZIZO Customer Service:  
info@zizowireless.com | (909) 444-7992



### PACKAGE CONTENTS

- 2 x VENTURE SPORT Earbuds (L + R)
- 4 x Eartips (XS, S, M, L)
- 1 x USB Charging Cable
- 1 x Travel Case
- 1 x Quick Start Guide
- 1 x Warranty Card

### LAYOUT

- Case**
- Charging Port
  - Indicator Light
  - Charging Contacts
  - Function Button



### GETTING STARTED

Before using your speakers the first time, fully charge each speaker.

#### POWER ON



Press and hold the power button on both earbuds simultaneously for 3 seconds. A voice will prompt you once paired successfully.

#### BLUETOOTH® PAIRING

- 1 Once powered, the earbuds will automatically go into pairing mode
- 2 Navigate to your device's Bluetooth® settings
- 3 Select "ZIZO VENTURE SPORT" from the available device list. The status lights will turn off after pairing successfully

#### CHARGING


- 1 Ensure both buds are securely placed in the charging case
- 2 Close lid and connect included cable to power source

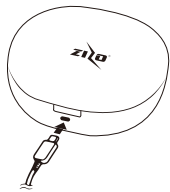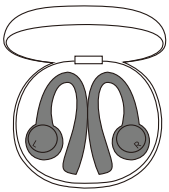

Solid Red Light = Charging | Blue LED off = Fully Charged | Flashing Red Light = Low Battery

### USING YOUR DEVICE

#### CONTROLS

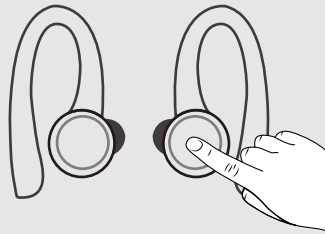

- Single Press
- Double Press
- Triple Press
- ▬ Press & Hold

**VOLUME**  
Volume level can be adjusted directly from audio source (Phone, PC, etc.)

#### BUTTON FUNCTIONS

- |  |  |  |
|--|--|--|
| ●<br><b>Single Press (L or R)</b><br>Play / Pause Music<br>Answer/ end call                  | ●●<br><b>Double Press (L or R)</b><br>Redial                       | ●●●<br><b>Triple Press (L or R)</b><br>Next Song                       |
| ▬<br><b>Press &amp; Hold for 2 seconds (L or R)</b><br>Activate your phone's voice assistant | ▬<br><b>Press &amp; Hold for 3 seconds (L or R)</b><br>Reject call | ▬<br><b>Press &amp; Hold for 4-5 seconds (L or R)</b><br>Power On/ Off |

### TECHNICAL SPECIFICATIONS

Model: VENTURE SPORT

Bluetooth® Wireless Technology: V 5.0  
 Wireless Transmission Distance: Up to 35 ft  
 Battery Capacity : 40 mAh / Earbud  
 Charging Time: 1.5 hours  
 Music Playback: 2.5 hours  
 Weight: 50g with case  
 Dimensions: 78 x 72 x 32 mm

#### Important Safeguards:

1. Do not allow water to spill onto the surface or into the product.
2. Children should be supervised.
3. If the product surface is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact ZIZO customer support.
4. Do not place the unit in water.
5. Do not place the product in direct heat. This unit is to be placed in a dry and ventilated place.
6. Do not place heavy objects on the unit.

### WARRANTY INFORMATION

At ZIZO, we are 100% committed to your satisfaction. We stand behind our products and offer a 1 year manufacturer warranty against defects in materials or workmanship of your new ZIZO earbuds.

Should you find your item to be defective, simply visit [zizowireless.com/warranty](http://zizowireless.com/warranty) to submit a brief Warranty Service Request form. Warranty applies to products purchased from ZIZO Authorized resellers. International product registration is not available at this time. U.S. Customers Only.

### CONTACT US

#### ZIZO Customer Service

**Email**  
info@zizowireless.com

**Telephone**  
+1 (909) 444-7992 (English)

**Website**  
[zizowireless.com/support](http://zizowireless.com/support)

@ZIZOWIRELESS | | ZIZOWIRELESS.COM



© 2019 ZIZO, a registered brand under Balaji Trading Inc. All Rights Reserved. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Balaji Trading Inc. is under license. Other trademarks and trade names are those of their respective owners.  
\*Images on packaging used for illustration purposes. Actual product may vary due to continuous refinements.

# BUILT FOR ADVENTURE





## VENTURE SPORT ÉCOUTEURS SANS FIL

# Guide De Démarrage Rapide

Modèle: VENTURE SPORT

Pour plus d'informations s'il vous plaît  
contacter Service client ZIZO:  
info@zizowireless.com | (909) 444-7992



## CONTENU DU COLIS

- 2 X Écouteurs Venture Sport (L + R)
- 4 X Embouts (XS, S, M, L)
- 1 X Câble de Charge Usb
- 1 X Trousse de Voyage
- 1 X Guide de Démarrage Rapide
- 1 X Carte de Garantie

## LAYOUT

- La Boîte**
- Port de Chargement
  - Voyant
  - Contacts de Charge
  - Bouton de Fonction



## COMMENCER

Avant d'utiliser vos haut-parleurs pour la première fois, chargez-les complètement.

## ALLUMER



Appuyez simultanément sur le bouton d'alimentation des deux oreillettes pendant 3 secondes. Une voix vous invitera une fois le jumelage réussi.

## BLUETOOTH® APPARIEMENT

- 1 Une fois alimentés, les oreillettes passeront automatiquement en mode de couplage
- 2 Accédez aux paramètres Bluetooth® de votre appareil
- 3 Sélectionnez "ZIZO VENTURE SPORT" dans la liste des périphériques disponibles. Les voyants d'état s'éteignent une fois l'appariement réussi

## CHARGING


- 1 Assurez-vous que les deux têtes sont correctement placées dans le boîtier de chargement
- 2 Fermez le couvercle et connectez le câble fourni à la source d'alimentation

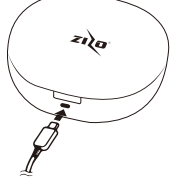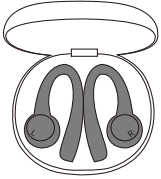

Lumière Rouge Fixe = Charge | DEL Bleue Éteinte = Entièrement Chargée | Voyant Rouge Clignotant = Pile Faible

## UTILISER VOTRE APPAREIL

### CONTRÔLES

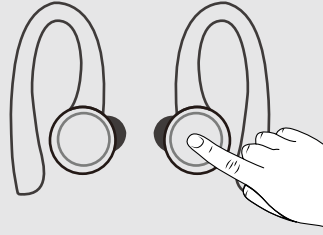

- Unique Presse
- Double Presse
- Triple Presse
- ▬ Press & Tenir

### LE VOLUME

Le niveau de volume peut être réglé directement à partir de la source audio (téléphone, ordinateur, etc.)

### FONCTIONS DES BOUTONS

● <b>Unique Presse (L or R)</b> Jouer/ Pause La Musique Réponse/ Fin d'appel	●● <b>Double Presse (L or R)</b> Rappel	●●● <b>Triple Presse (L or R)</b> Suivant Chanson
▬ <b>Press &amp; Tenir pour 2 secondes (L or R)</b> Activer votre Téléphone's Voix Assistante	▬ <b>Press &amp; Tenir pour 3 secondes (L or R)</b> Rejeter Appel	▬ <b>Press &amp; Tenir pour 4-5 secondes (L or R)</b> Allume / Éteint

## SPÉCIFICATIONS TECHNIQUES

Modèle: VENTURE SPORT

Bluetooth® Wireless Technology: V 5.0  
 Distance de Bransmission sans Fil: Jusqu'à 35 ft  
 Capacité de la Batterie: 40 mAh / Oreillette  
 Temps de Charge: 1.5 heure  
 Temps de Musique: 2.5 heures  
 Poids: 50g avec le cas  
 Dimensions: 78 x 72 x 32 mm

### Garanties Importantes:

1. Ne laissez pas l'eau se répandre sur la surface ou dans le produit.
2. Les enfants doivent être surveillés.
3. Si la surface du produit est endommagée ou s'il existe un problème mécanique ou électrique. dysfonctionnement, n'utilisez pas l'appareil. Contactez le support client ZIZO.
4. Ne placez pas l'appareil dans l'eau.
5. Ne placez pas le produit à la chaleur directe. Cette unité doit être placée dans un endroit sec et endroit ventilé.
6. Ne placez pas d'objets lourds sur l'appareil.

## INFORMATIONS DE GARANTIE

Chez ZIZO, nous nous engageons à 100% pour votre satisfaction. Nous garantissons nos produits et offrons une garantie du fabricant d'un an contre les défauts de matériaux ou de fabrication de vos nouveaux écouteurs ZIZO.

Si vous trouvez que votre article est défectueux, visitez simplement [zizowireless.com/warranty](http://zizowireless.com/warranty) pour envoyer un bref formulaire de demande de service de garantie. La garantie s'applique aux produits achetés auprès de revendeurs ZIZO agréés. L'enregistrement international du produit n'est pas disponible pour le moment. Clients américains uniquement.

## CONTACTEZ NOUS

### Service client ZIZO

Adresse électronique  
info@zizowireless.com

Téléphone  
+1 (909) 444-7992 (English)

Site Internet  
zizowireless.com/support

@ZIZOWIRELESS | f | @ | | ZIZOWIRELESS.COM



# CONSTRUIT POUR AVENTURE

