



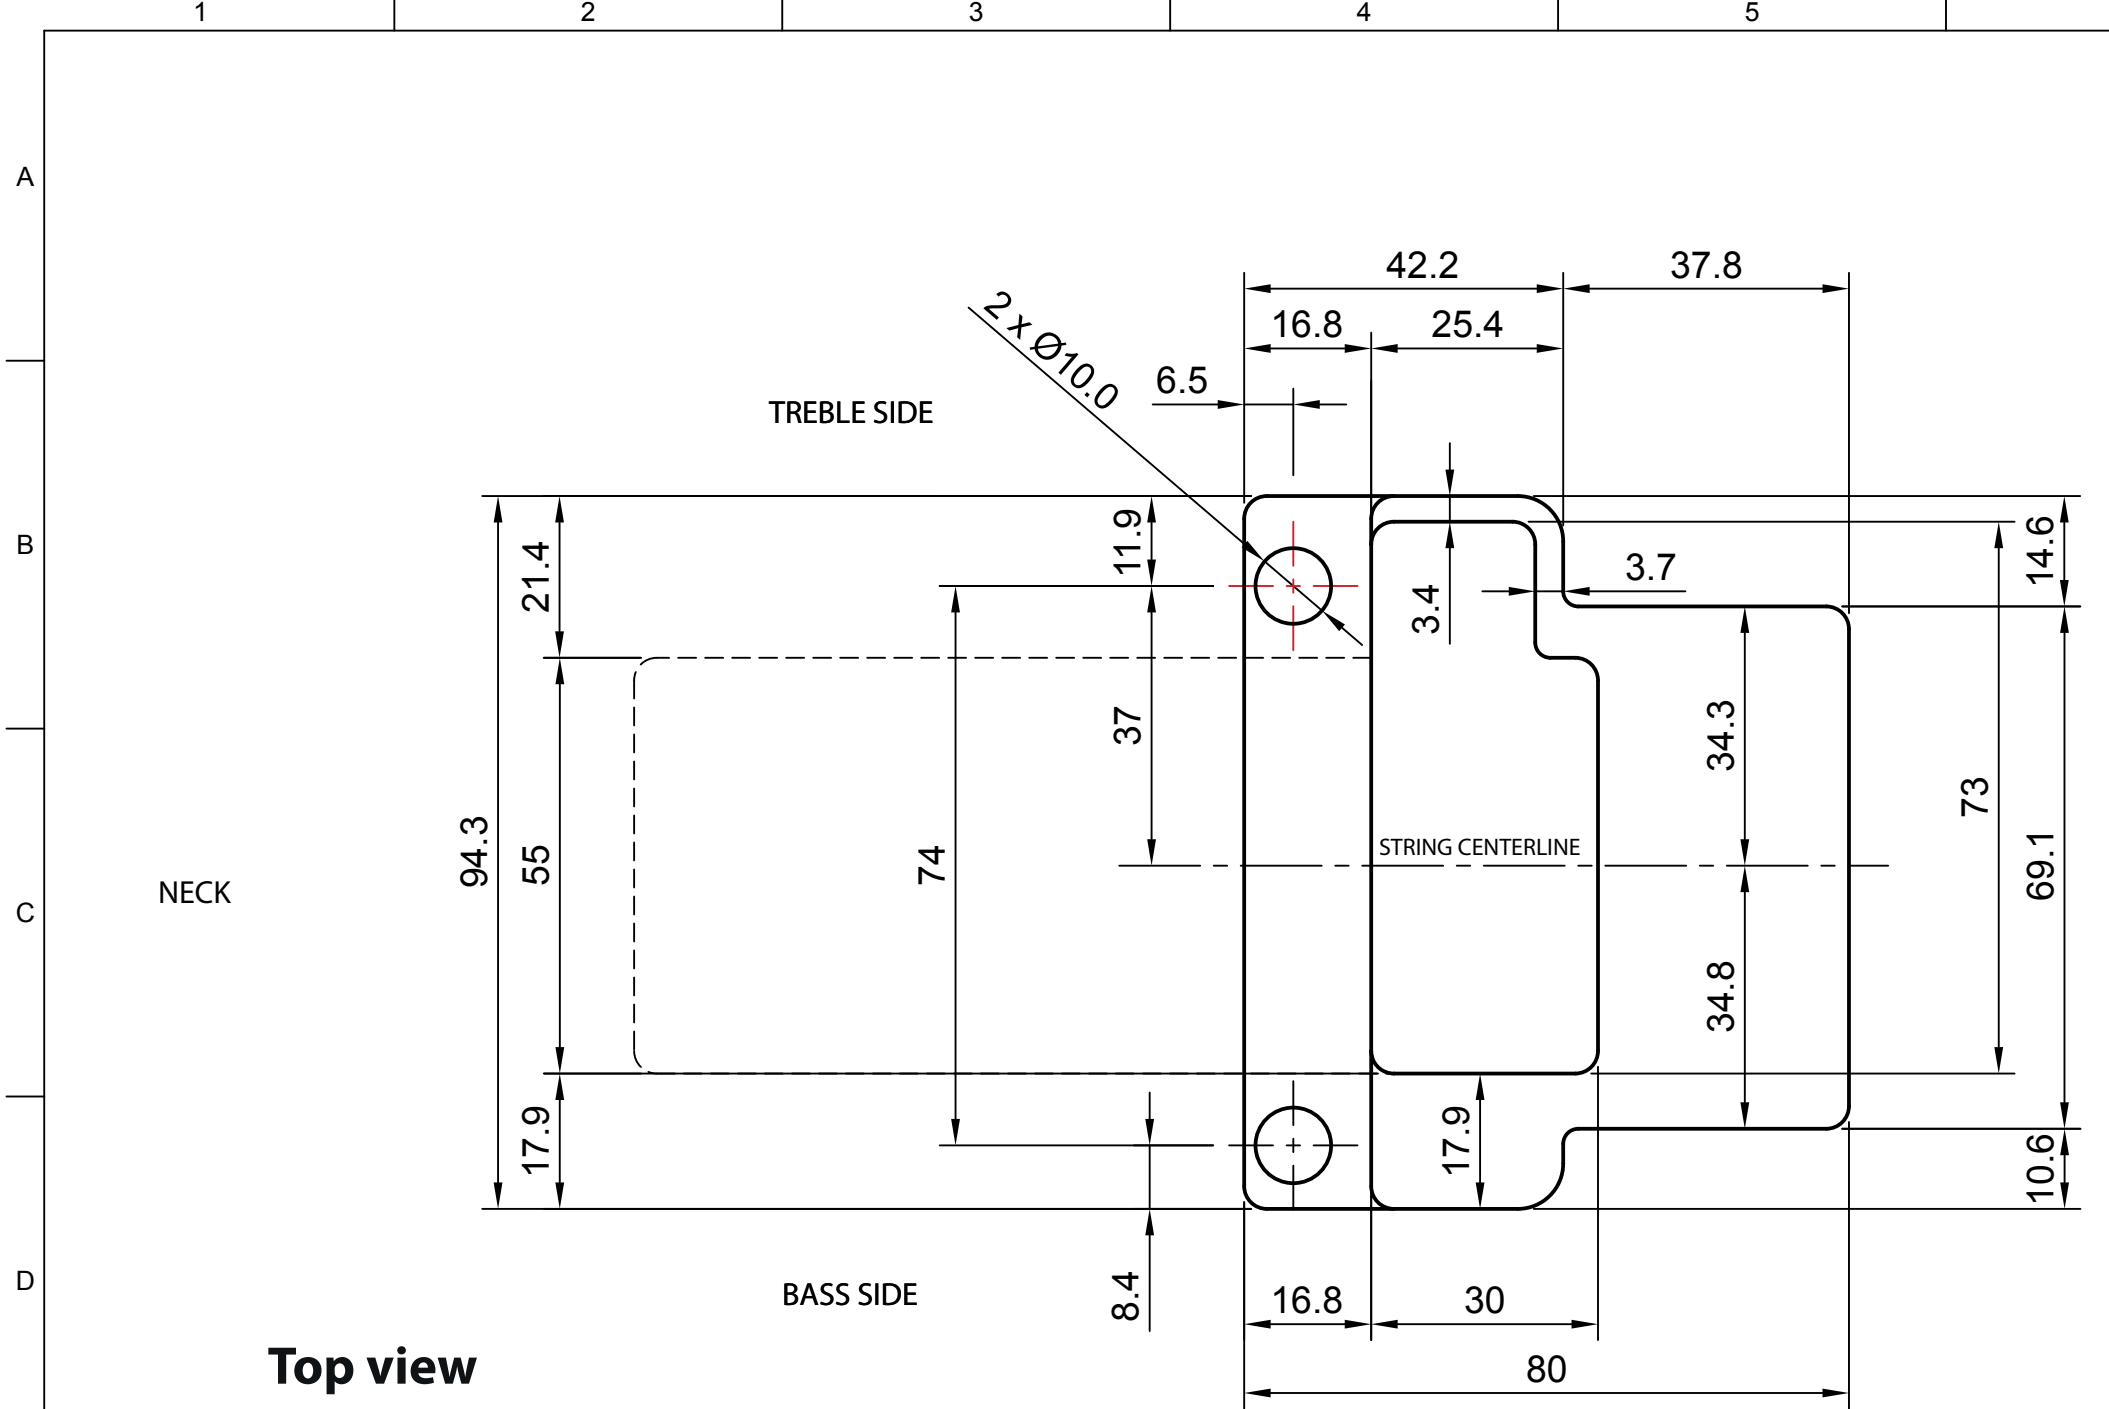


Top view

Treble-side stud position relative to the string centerline is the lateral reference.
The straight FlowTrem2 bass-side knife edge accommodates minor variations in stud spacing.

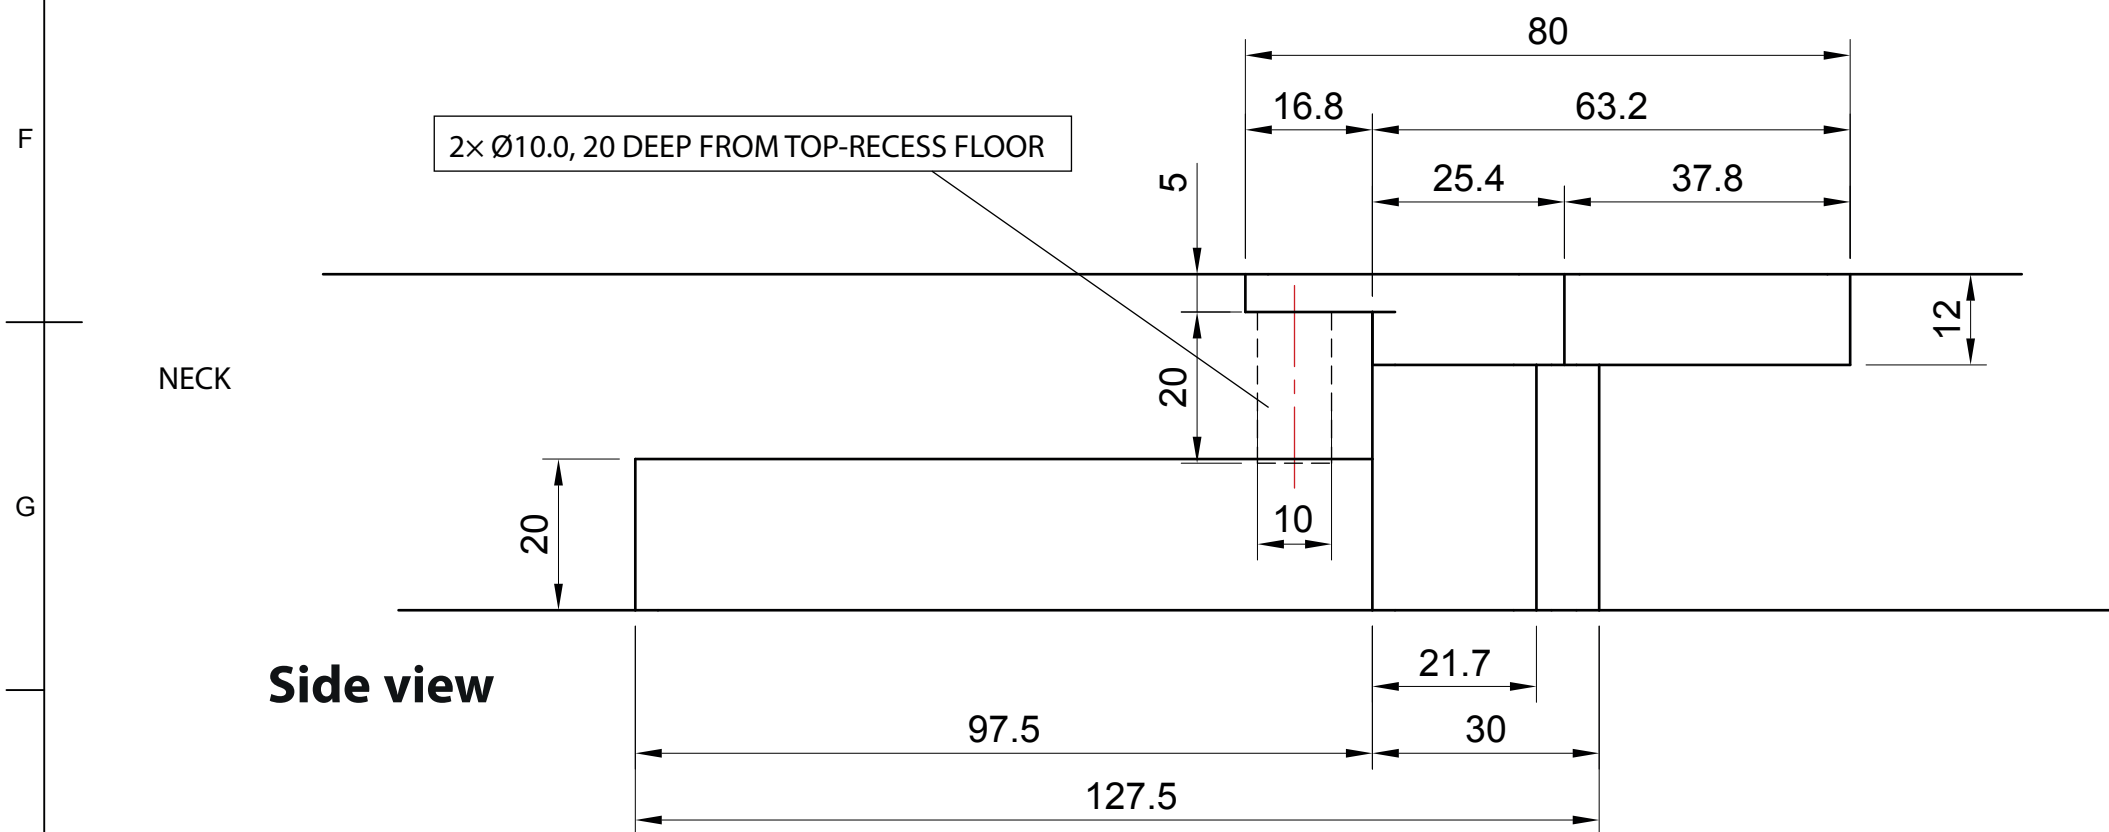


Side view

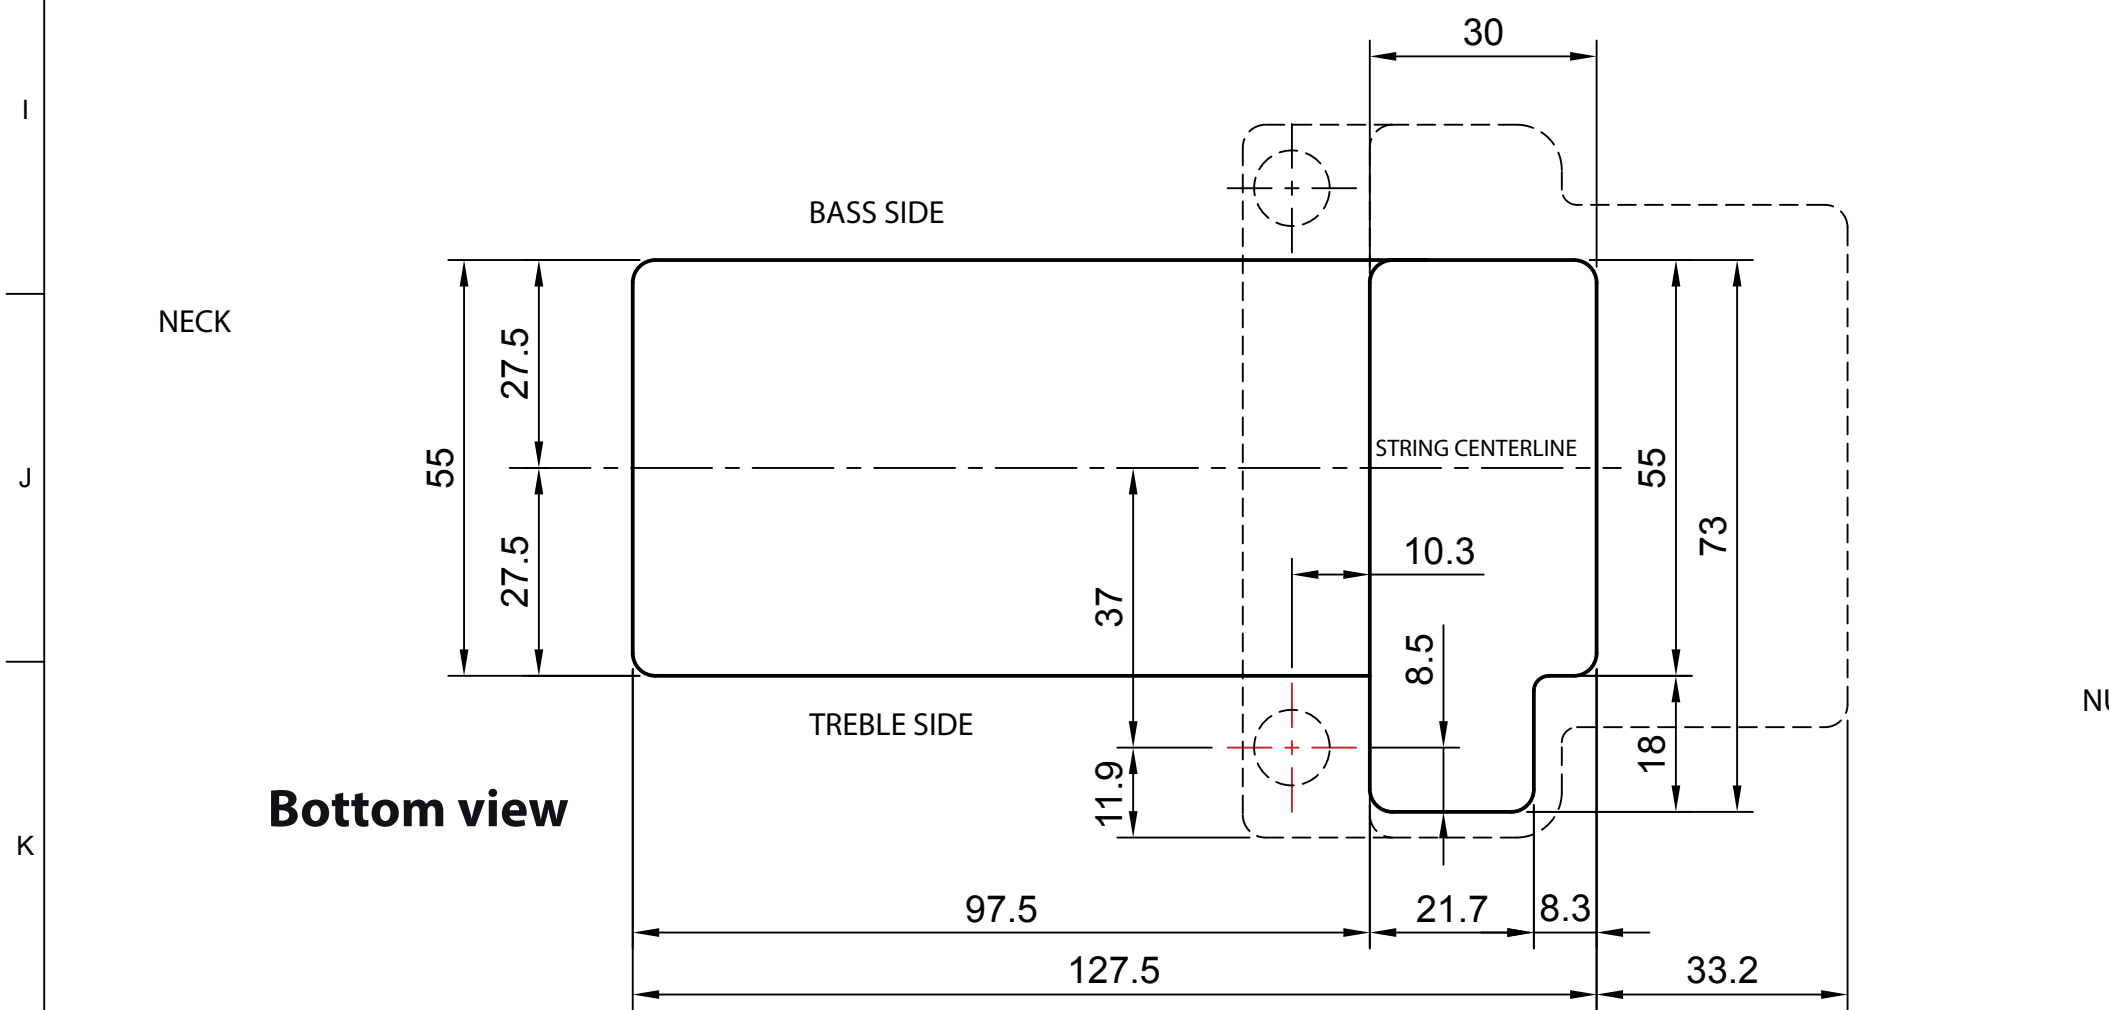

Bottom view

Routing templates

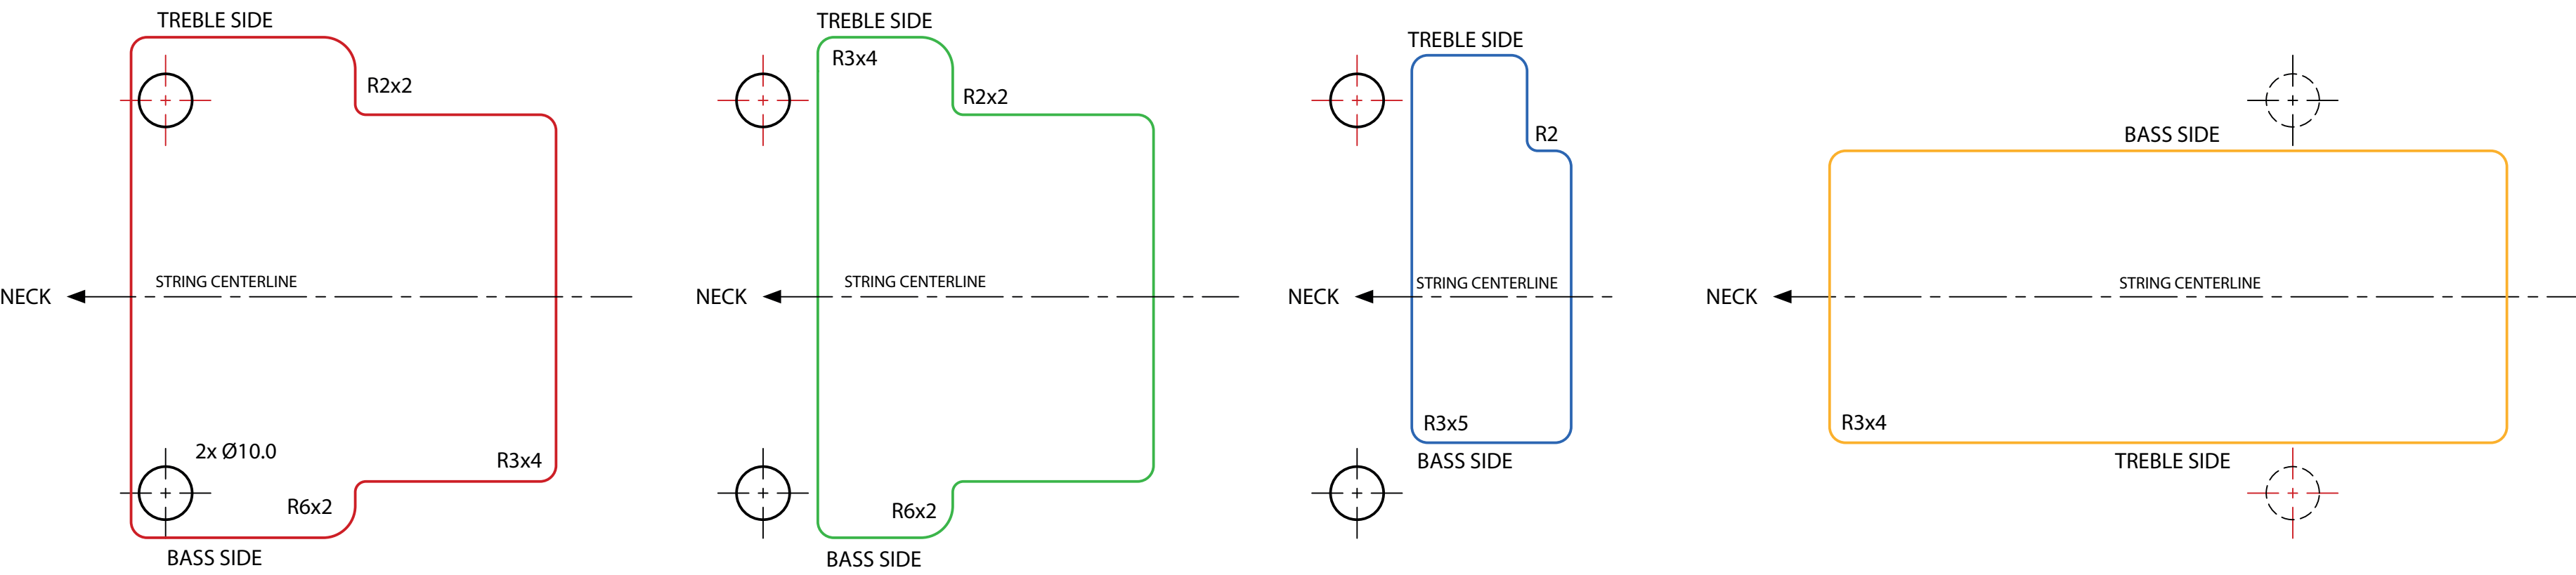

1

TOP RECESS
5 mm DEEP

STANDARD BUSHING MOUNTING

2x Ø10.0 mm, 20 mm DEEP FROM TOP-RECESS FLOOR
Ø10.0 mm recommended bore diameter.
For softer woods, Ø9.8 mm may be appropriate;
verify press fit before installation.

OPTIONAL WOOD-SCREW STUD MOUNTING

Ø6.9 mm x 9.5 mm DEEP COUNTERBORE
Ø4.4 mm x 35 mm DEEP PILOT HOLE
Depths measured from top-recess floor.
Recommended only for dense, structurally sound body woods.

VERIFY BODY THICKNESS BEFORE DRILLING.
DO NOT DRILL THROUGH THE BACK SURFACE.

2

MAIN CAVITY
12 mm DEEP FROM TOP SURFACE



3

BLOCK CLEARANCE
THROUGH ROUTE

May be routed from top or bottom.
Mirror template when routing from bottom.



4

SPRING CAVITY
20 mm DEEP FROM BOTTOM SURFACE

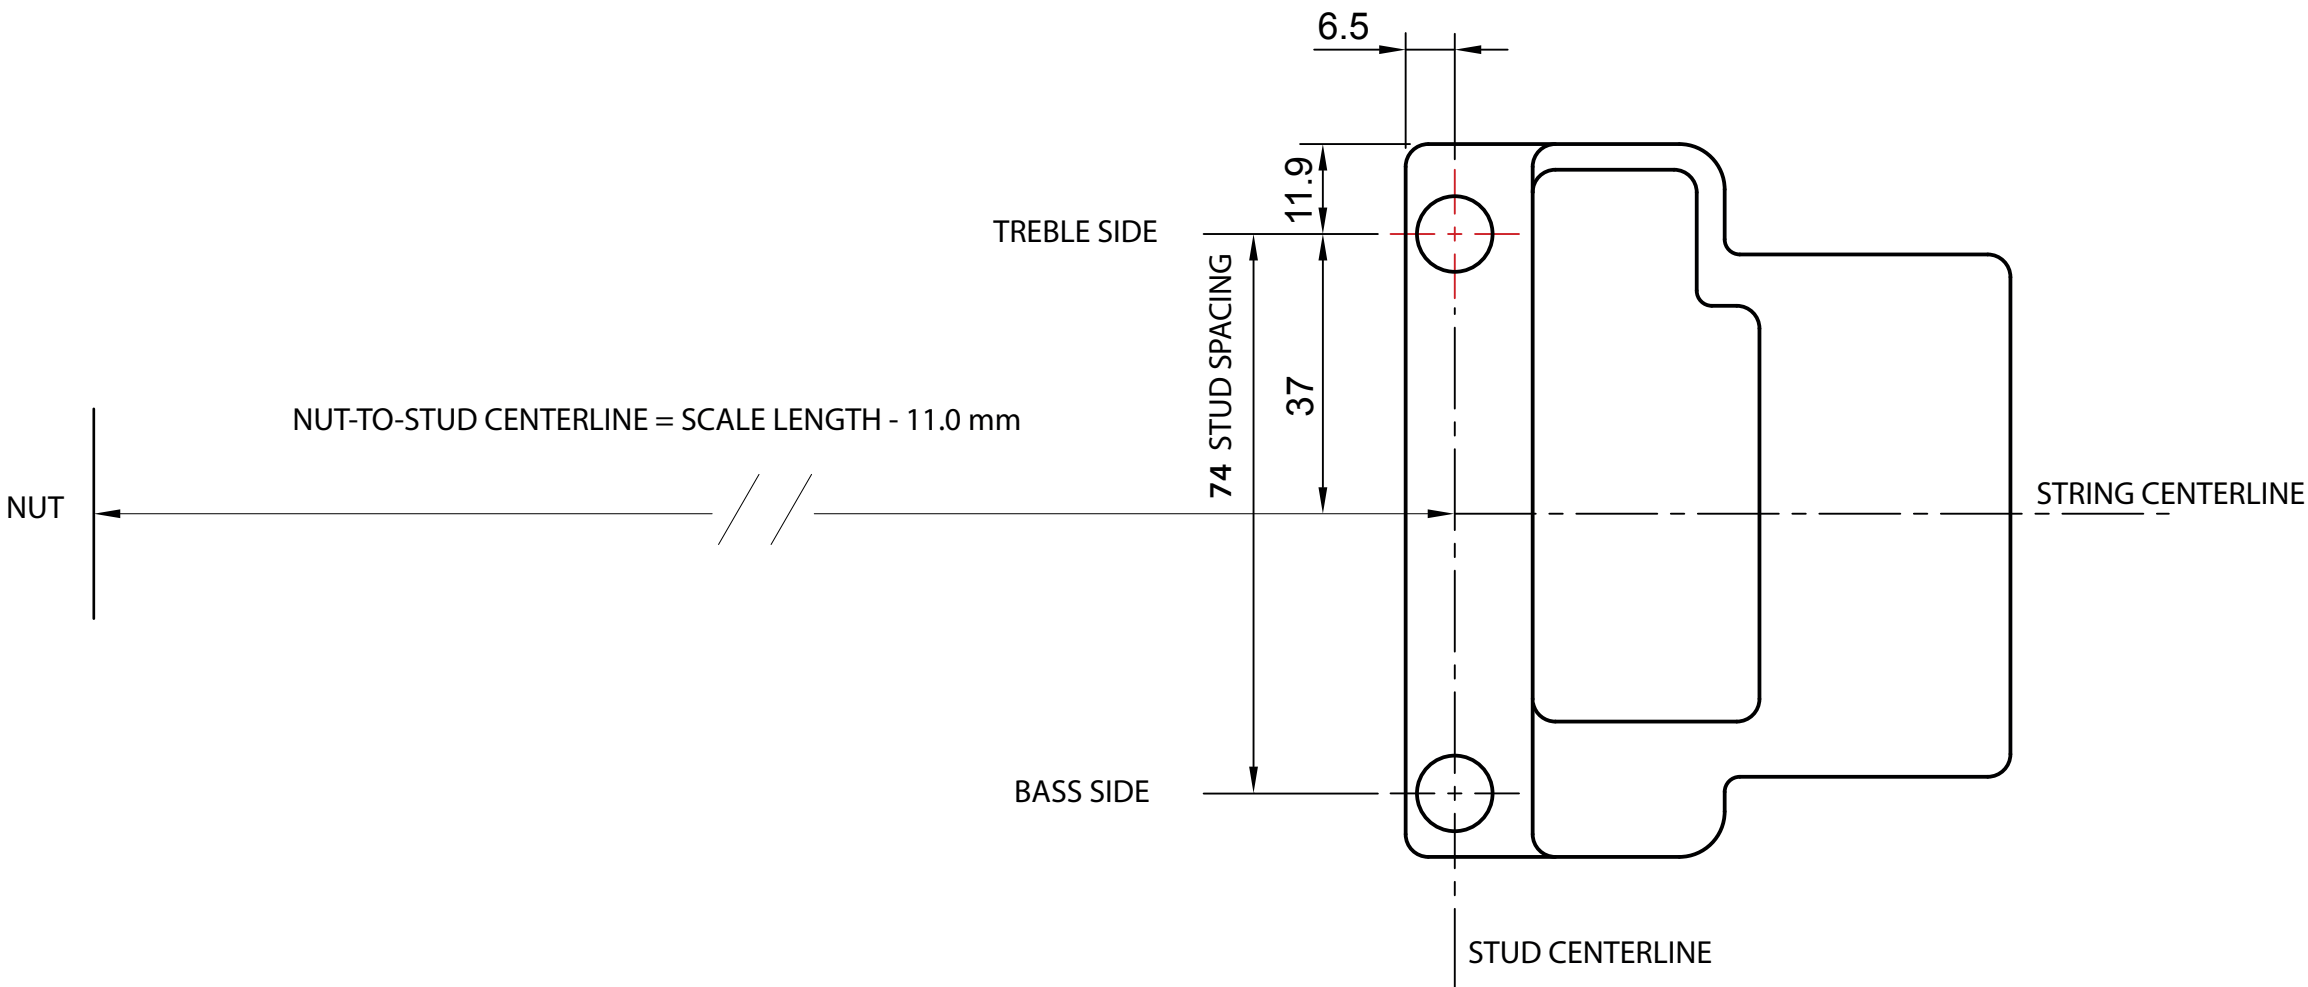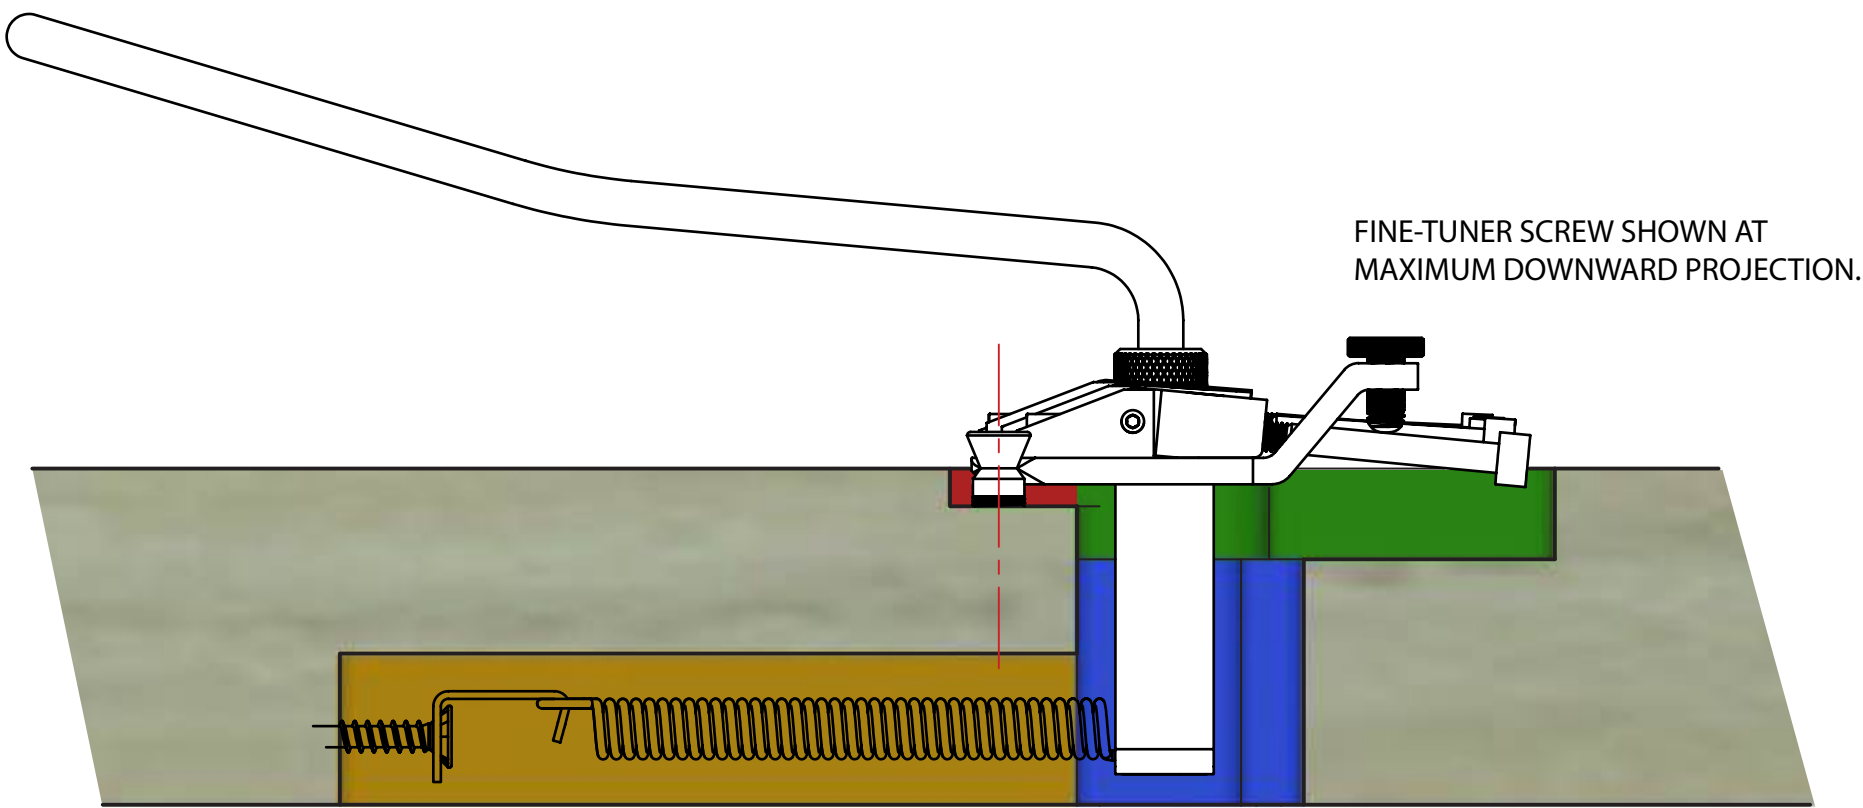


Download routing drawings and DXF files:
<https://knowledge.kissmystrings.com/installation-setup/flowtrem2-routing-files>

Visual reference only — not to scale. Dimensions and routing templates govern.

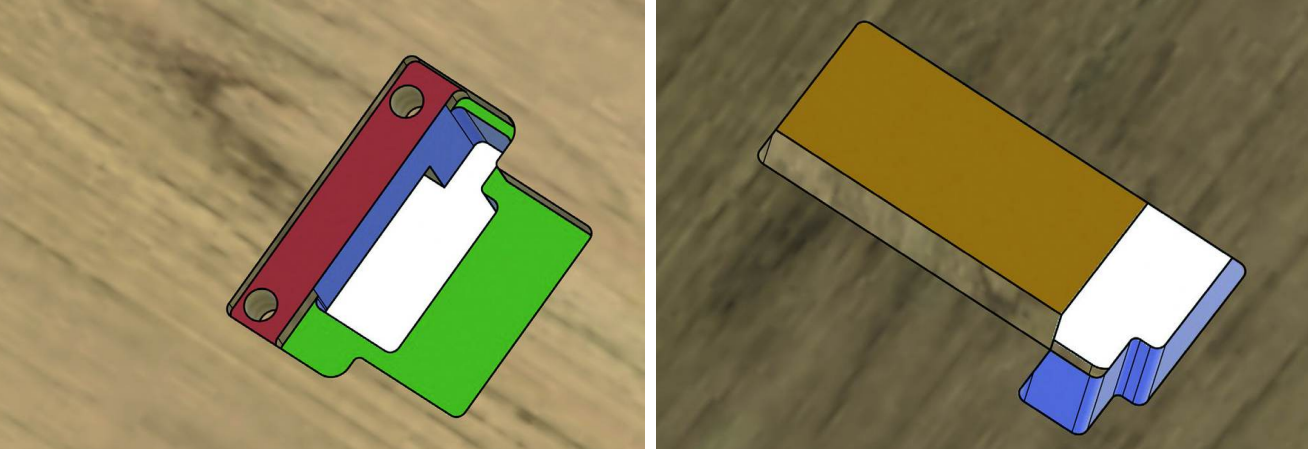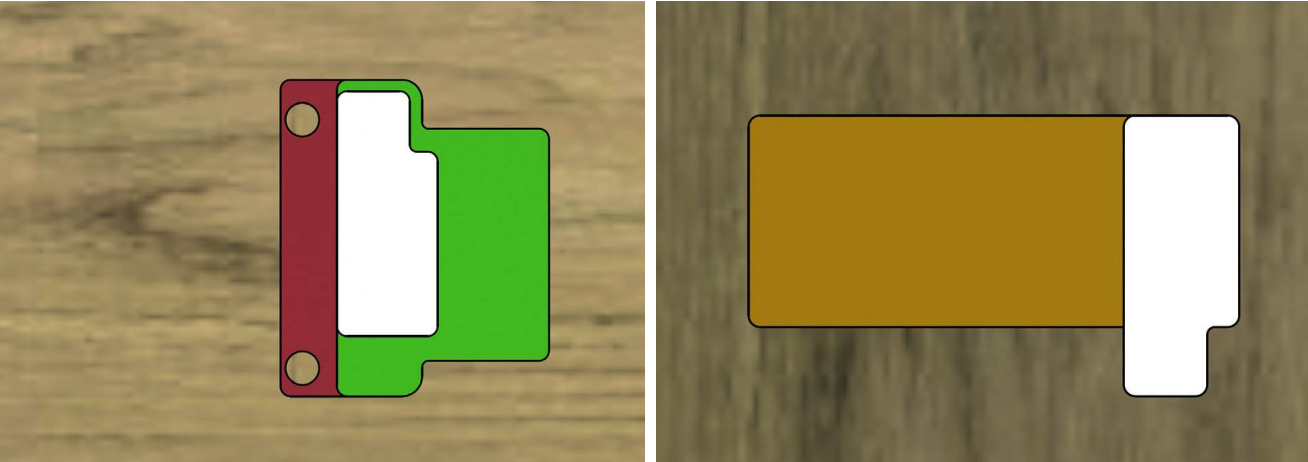

DIMENSIONS IN mm
TEMPLATES SCALE 1:1 - PRINT AT 100% / ACTUAL SIZE
VERIFY SCALE BEFORE ROUTING - DIMENSIONS GOVERN



 Legal Owner KMS - KISS MY STRINGS Germany kissmystrings.de	
--	---