

Steering Wheel Controller | Nissan | 868



→ Vehicle Installation Instructions

The instructions below will guide you through installation of the Steering Wheel Controller in your vehicle.

Connections

Aftermarket Radio Harness

1. Connect **Pin 6** of the Steering Wheel Controller harness to the **BLACK** ground wire of the aftermarket radio.
2. Connect **Pin 12** of the Steering Wheel Controller to the **RED** accessory wire of the aftermarket radio.

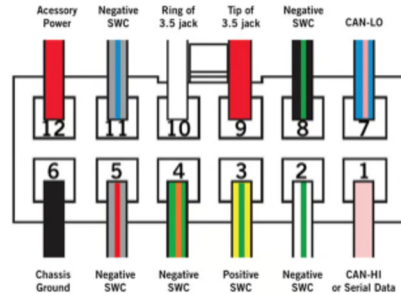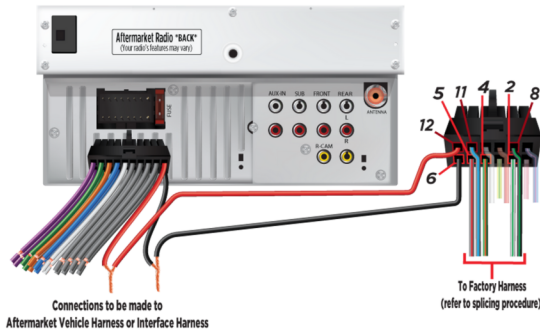


Vehicle Connection(s) to Factory Harness

WARNING


The **resistor** is not required if your vehicle has **5 (five) buttons on the steering wheel**. Connect the wires in Step 1 directly to each other.

Wire color depicted does not necessarily represent the actual wire color in the vehicle.

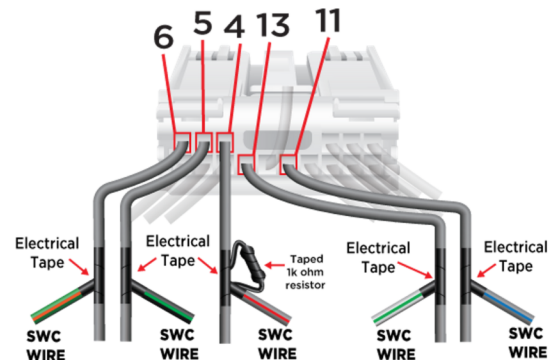

Five buttons on the steering wheel (1a)

1. Verify whether or not your steering wheel has **five buttons**, then:
 - a. **More or fewer than five buttons:** Connect a **1K ohm resistor** to **Pin 5** of the Steering Wheel Controller (**Gray/Red** wire) and then to **Pin 4** of the vehicle's radio harness.
 - b. **Five Buttons:** Connect **Pin 5** of the Steering Wheel Controller (**Gray/Red** wire) to the wire in **Pin 4** of the vehicle's radio harness.
2. Connect **Pin 2** of the Steering Wheel Controller (**White/Green** wire) to the wire in **Pin 13** of the vehicle's radio harness.
3. Connect **Pin 4** of the Steering Wheel Controller (**Green/Orange** wire) to the wire in **Pin 6** of the vehicle's radio harness.
4. Connect **Pin 8** of the Steering Wheel Controller (**Black/Green** wire) to the wire in **Pin 5** of the vehicle's radio harness.
5. Connect **Pin 11** of the Steering Wheel Controller (**Gray/Blue** wire) to the wire in **Pin 11** of the vehicle's radio harness.

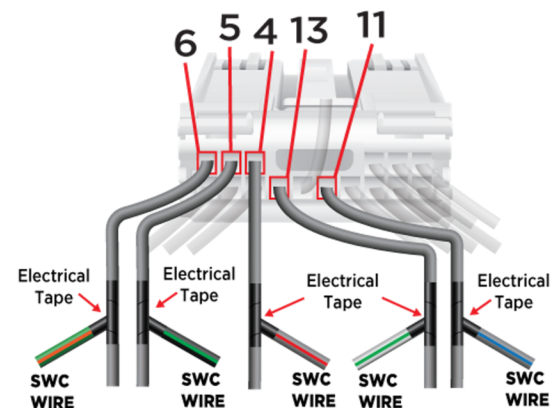


More or fewer than five buttons on the steering wheel (1b)

Connections (cont.)

SWC 3.5 Jack Connections


For radios with a 3.5mm port located on the rear, plug the male 3.5mm jack directly into the back of the radio.

1. Connect the **3.5mm Jack** to the SWC (Steering Wheel Control) input on the back of the radio.

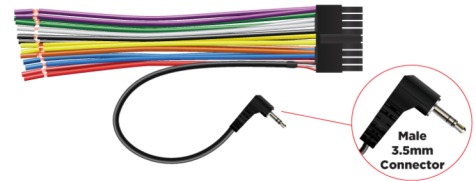

Kenwood/JVC Radios with Single SWC wire

1. Connect the **Blue/Yellow** wire labeled **Steering Wheel Remote Input** to the **Brown** wire of the female 3.5mm jack.
2. Plug in the male 3.5mm jack into the female 3.5mm jack.

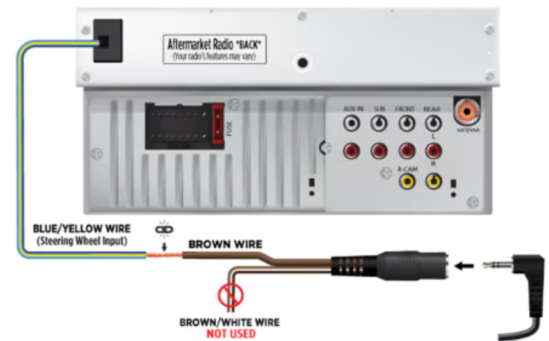


NOTE

Proceed to Page 3 for **Programming Instructions**.


Programming the Steering Wheel Controller

In order to effectively program the Steering Wheel Controller, the aftermarket radio needs to be (or remain) completely wired. The Steering Wheel Controller harness should be wired and the (Steering Wheel Control) SWC 3.5mm Jack or SWC wiring should be connected.

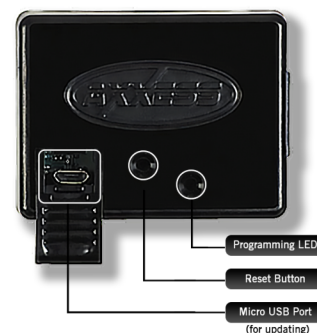

Follow the steps below to programming the Steering Wheel Controller to your vehicle:

1. Open the driver's door. **Keep it open during the programming process.**

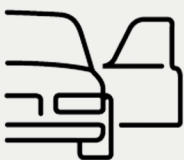

2. Turn the vehicle's ignition **On**.



3. Plug in the **Steering Wheel Controller**.



4. The LED on the SWC begins rapid flashing **Green** and **Red**.



5. (Optional) If the LED does not turn on, refer to **Connections** above and ensure all steps were performed precisely.

6. Hold the **Volume Up** button on the steering wheel.



7. (Optional) If the **Green** and **Red** flashes are missed, reset the Steering Wheel Controller and restart the programming process from the beginning.

8. Stop tapping the **Volume Up** button. The Steering Wheel Controller is being programmed into the vehicle's steering wheel controls (SWC).

NOTE

A series of 7 Green LED flashes identifies your vehicle type. Once the detection process completes, the Green LED will pause for one to two seconds.



9. The LED begins flashing **Red** while the interface programs itself to the aftermarket radio. A series of **up to 24 Red** LED flashes identifies the detected Radio Type.



10. Upon successfully programming, the LED turns solid **Red**.



11. Test all functions of the Steering Wheel Controller installation for proper operation.

